Shut-off valve type AVT and AVM

Product documentation

Operating pressure pmax: Flow rate Qmax: 630 bar 50 lpm





D 7690 05-2016-1.1





© by HAWE Hydraulik SE.

The reproduction and distribution of this document as well as the use and communication of its contents to others without explicit authorisation is prohibited.

Offenders will be held liable for the payment of damages.

All rights reserved in the event of patent or utility model applications.

Brand names, product names and trademarks are not specifically indicated. In particular with regard to registered and protected names and trademarks, usage is subject to legal provisions.

HAWE Hydraulik respects these legal provisions in all cases.

Printing date / document generated on: 08.11.2017



Contents

1	Overview of shut-off valve type AVT and AVM	.4
2	Available versions, main data	5
3	Parameters	6
3.1	General	6
4	Dimensions	8
5	Assembly, operation and maintenance recommendations	.9
5.1	Intended use	. 9
5.2	Assembly information	9
5.3	Operating instructions	10
5.4	Maintenance information	10



1 Overview of shut-off valve type AVT and AVM

Throttle and shut-off valves are a type of metering valve. With the aid of these valves a pressure drop can be established between the inlet and outlet side. In this way the velocity of cylinders in accumulator circuits and the flow rate in control circuits can be regulated or a consumer line completely shut-off (e.g. to protect a pressure gauge).

The throttle and shut-off valve type AVT produces a throttle effect by means of an annular gap. It is mounted in a T-housing. Commercially available pipe screw connections enable a direct pipe connection.

Features and benefits:

- Various configurations
- Sensitive adjustment and complete shut off possible

Intended applications:

• General hydraulic systems



Shut-off valve type AVT and AVM



2 Available versions, main data

Circuit symbol:





Marking	Description	Connection pipe \varnothing_{A}	Pressure range p _{max} (bar)		
		(mm)	Output B	Input A	
AVT 6		6	630		
AVT 8	With rise connection at both and	8			
AVT 10	with pipe connection at both enus	10		630	
AVT 12		12			
AVM 8	With nine bracket at one and	0	500		
AVM 8 L	with pipe blacket at one enu	0	315	315	



Parameters

3.1 General

3

General information

Description	Shut-off valve				
Design	Cone valve				
Model	Pipe screw connection				
Material and surface protection	Steel, seat and cone hardened and ground				
Mounting	Freely suspended in pipe				
Installation position	As desired				
Flow direction	Recommended $A \rightarrow B$: A - inflow side, delivery side to be shut off B - continuing pressure line, return line, element that is shut off (pressure gauge, pressure switch) tight at both ends when closed				
Hydraulic fluid	Hydraulic oil: according to Part 1 to 3; ISO VG 10 to 68 according to DIN ISO 3448 Viscosity limits: min. approx. 4, max. approx. 1500 mm ² /s opt. operation approx. 10 500 mm ² /s. Also suitable for biologically degradable hydraulic fluids type HEPG (polyalkylene glycol) and HEES (synthetic ester) at operating temperatures up to approx. +70°C.				
Cleanliness level	ISO 4406				
	21/18/1519/17/13				
Temperatures	Ambient: approx40 +80°C, Fluid: -25 +80°C, Note the viscosity range! Permissible temperature during start: -40°C (observe start-viscosity!), as long as the service temperature is at least 20K higher for the following operation. Biologically degradable pressure fluids: Observe manufacturer's specifications. By considera- tion of the compatibility with seal material not over +70°C.				
Pressure and flow rate					
Operating pressure	p _{max} (<u>Chapter 2, "Available versions, main data</u> "); corresponds to nominal pressure with 4x protection against bursting				
	Pressure at B: Permissible system pressure with valve open				
	Pressure at A: Permissible overload capacity at input A with valve closed				



Characteristic curves



Weight

Туре	
AVT 6 AVT 8 AVT 10 AVT 12 AVM 8 AVM 8 L	= 140 g = 175 g = 230 g = 315 g = 110 g = 100 g



4

Dimensions

All dimensions in mm, subject to change.



AVM



s Adjustment travel

2	Aujustilleli	ιιανει

Туре	Н	D	Ød	ι	l ₁	S	SW1	SW2	SW3
AVT 6	91	40	6	31		3	17	14	
AVT 8	94	40	8	32		3.5	19	17	
AVT 10	94	40	10	34		4.5	22	19	
AVT 12	114	50	12	38		5	24	22	
AVM 8	91	40	8	29	32	3.5	19	14	19
AVM 8 L	92	40	8	30.5	30	3.5	17	17	19



5 Assembly, operation and maintenance recommendations

5.1 Intended use

This valve is exclusively intended for hydraulic applications (fluid engineering).

The valve demands high technical safety standards and regulations for fluid engineering.

The user must observe the safety measures and warnings in this documentation.

Essential requirements for the product to function correctly and safely:

- All information in this documentation must be observed. This applies in particular to all safety measures and warnings.
- The product must only be assembled and put into operation by qualified personnel.
- The product must only be operated within the specified technical parameters. The technical parameters are described in detail in this documentation.
- The operating and maintenance manual of the specific complete system must also always be observed.

If the product can no longer be operated safely:

- 1. Remove the product from operation and mark it accordingly
- \checkmark It is then not permissible to continue using or operating the product

5.2 Assembly information

The product must only be installed in the complete system with standard and compliant connection components (screw fittings, hoses, pipes, etc.).

The hydraulic power pack must be shut down correctly prior to dismounting; this applies in particular to power packs with hydraulic accumulators.



Risk to life caused by sudden movement of the hydraulic drives when dismantled incorrectly! Risk of serious injury or death.

- Depressurise the hydraulic system.
- Perform safety measures in preparation for maintenance.



5.3 Operating instructions

Product configuration and setting the pressure and flow rate

The statements and technical parameters in this documentation must be strictly observed. The instructions for the complete technical system must also always be followed.

Note

- Read the documentation carefully before usage.
- The documentation must be accessible to the operating and maintenance staff at all times.
- Keep documentation up to date after every addition or update.

Caution

Risk of injury due to unexpected movement processes in the machine due to incorrect flow setting! Risk of minor injury

- Be prepared for unexpected, fast movements. On changing the flow settings, consumers will move more slowly or more quickly.
- Always monitor the pressure gauge when setting or changing the flow.

Purity and filtering of the hydraulic fluid

Fine contamination can significantly impair the function of the hydraulic component. Contamination can cause irreparable damage.

Examples of fine contamination include:

- Metal chips
- Rubber particles from hoses and seals
- Dirt due to assembly and maintenance
- Mechanical debris
- Chemical ageing of the hydraulic fluid

Note

Fresh hydraulic fluid from the drum does not always have the highest degree of purity. Under some circumstances the fresh hydraulic fluid must be filtered before use.

Pay attention to the cleanliness level of the hydraulic fluid in order to maintain faultless operation. (Also see cleanliness level in <u>Chapter 3</u>, "Parameters").

5.4 Maintenance information

This product is largely maintenance-free.

Conduct a visual inspection at regular intervals, but at least once per year, to check if the hydraulic connections are damaged. If external leakages are found, shut down and repair the system.

Clean the device surface of dust deposits and dirt at regular intervals, but at least once per year.



Further information

Additional versions

- Throttle valve and shut-off valve type AV: D 4583
- Throttle valve and shut-off valve CAV: D 7711
- Pressure-dependent shut-off valve type DSV: D 3990
- Pressure-dependent shut-off valve type CDSV: D 7876

Application

• Fitting type X 84: D 7077

HAWE Hydraulik SE

Streitfeldstraße 25 | 81673 München | Postfach 80 08 04 | 81608 München | Germany Tel +49 89 379100-1000 | Fax +49 89 379100-91000 | info@hawe.de | www.hawe.com